

## FLOOR CARE & MAINTENANCE FOR WPC Clic FLOORING:

Regular house cleaning with vacuum cleaners and or microfiber mops will help maintain the beauty and performance of your floor. Regularly clean and remove any particles that could cause abrasion or scratch your floor

- Constantly maintain “normal living conditions” in the home. Maintain the relative humidity between 35% - 60%, and interior temperature between 50 – 75 degrees. The proper use of a humidifier should be considered.
- Sweep and vacuum (do not use a vacuum with a beater bar or power rotary brush head as this may cause damage and void your warranty) regularly to remove dirt and grit off the floor.
- Remove spills immediately with a soft absorbent cloth.
- Only use WPC cleaning products with a microfiber mop. NEVER use abrasive cleaning products or ones that contain oils soaps, detergents, ammonia, acrylic finishes or bleach solutions. Do not use polishing products or wax which may damage the finish of the plank. The use of these products may permanently damage the finish of your floor and may void the warranty.
- Keep pet nails trimmed.
- Remove shoes with spiked or damaged heels. Use protective pads under furniture legs to reduce scratches and dents. Chair casters or rollers will cause premature wear or damage the finish. Protect the floor when moving heavy furniture and appliances. Do not roll or slide furniture or appliances with castors across the floor. Safely lift the furniture or appliances and move the object across into place.
- Long term exposure to direct sunlight can cause damage the floor. Close drapes or blinds during peak sunlight hours.
- Do not wear high heeled footwear with missing heel lifts as they can cause denting to the WPC floors.